

www.lamborghinimobile.com

Antares

MOBILE





PURE ITALIAN TALENT

A unique spirit permeates every product conceived, designed and created by Tonino Lamborghini. He possesses the ability to innovate, yet remain faithful to a tradition that embodies boldness and elegance.

This passionate quest to capture the essence of Italian Style is what drives Tonino Lamborghini and is behind the collections bearing his name. It's in the design, the attention to detail, the desire only a prestigious brand can awaken. Tonino Lamborghini has crafted a collection for men and women of chan cter, who refuse to go unnoticed.

Tonino Lamborghini has become an ambassador for Made in Italy, creating lines that evoke the tradition and heritage of Italian industrial Arts & Design.

The company aims to export a style and taste that are recognisably Italian and perceived the world over as the essence of luxury, exclusivity and style.



Tonino Lamborghini

Antares



※ For further information, please refer to the User Manual

www.lamborghinimobile.com

Quick Guide



Congratulations on purchasing your Tonino Lamborghini mobile phone, with Antares you have just taken your first step into a new dimension where technology and luxury co-exist. Welcome to our World.

- · Descriptions in this Guide may differ from your Antares phone or from the software provided by carriers and service providers, and are subject to change without prior notice.
- The accessories supplied have been designed solely for use with your Antares mobile phone and may not be compatible with other devices.
- · Third party accessories may not be compatible with Antares. Malfunctions caused by the use of unapproved third party accessories are not covered by Warranty.

About the Quick Guide

The Quick Guide guide gives you some important safety information, and details of the limited warranty for your Antares phone. It also contains a brief introduction to using your Antares phone.A more detailed User Guide is available on the website at www.lamborghinimobile.com

A Warning - Might cause personal injury.

① Caution - Might damage your phone or other equipment.

Note - Hints, tips or other information.

[Keys] - Identifies physical Keys on the phone. For example [Power] key Keys - Identifies Soft Keys on the Phone. For example "Menu key"

Copy Rights and Trade Marks


- The following are the trademarks of Google Inc.: Android logo, Google Search™, Google Maps™, Google Mail™, YouTube™, Android Market™ and Google Talk™
- Bluetooth[®] is a globally registered trade mark of Bluetooth SIG, Inc.
- Oracle and Java are the trademarks of Oracle and (or) its branches. Other trademarks might have their respective owners.
- Wi-Fi®, Wi-Fi CERTIFIED logo and Wi-Fi logo are the registered trademarks of Wi-Fi Alliance.
- All other trademarks and copy rights belong to their respective owners.

(CE0168D)


PREPARING YOUR PHONE FOR FIRST USE

Inserting the SIM and Micro SD Card

 
- 1. To remove the Battery Cover, push the Battery Cover Release Latch 1 towards the top of the phone.
- 3. Insert the SIM with the notched edge to the bottom right and the gold contacts facing down.



 2. Grip the sides of the Battery Coverand lift in the direction shown 2



 
4. Insert the SD Card with the notch to the bottom left and the gold contacts facing down. Slide the SD Card down, push it flat then slide up such that the top of the SD Card is located under the top retaining bar.



Inserting the Battery

The battery is supplied separately in the Sales Pack, to insert the battery follow the instructions below.

 
- 1. Remove the Battery Cover if it is in place.
- 2. Discard any packaging from the battery.
- 3. Insert the battery with the Tonino Lamborghini Logo facing upwards,
- putting the side of the battery with the contacts into the phone first so that they connect to the contacts in the phone (I).
- 4. Press the other edge of the battery gently into place so that the battery is flat (2).
- 5. Replace the Battery Cover.



- If you need to remove the battery, there is a recess at the top of the battery aperture that enables you to lift the battery out of the phone more easily.
- Dispose of batteries carefully. Do not dispose of the battery in fire or water, but follow local regulations regarding disposal or recycling.

Replacing the Battery Cover

 - 1. Locate the two notches at the bottom of the Battery Cover (inside) into the recesses on the bottom of your Antares phone ${\rm (I)}$.
- 2. Gently press down onto the top of the Battery Cover until the Battery Cover Latch clicks into place 2.



Charging your Antares Phone

Please charge your Antares phone prior to first use.

Your Antares phone is provided with three adaptors that fit EU, UK and US power sockets to enable you to charge your phone in many locations worldwide.

Before charging your phone, connect the appropriate adaptor to the charger body by sliding the socket adaptor into the charger body until the retaining catch clicks into place.

To remove the socket adaptor from the charger body, depress the retaining catch and slide the adaptor off the charger body.

Quick Guide

- Only use a battery and charger that have been approved for use with your Antares phone. Using unapproved charging equipment or batteries may damage your Antares phone and invalidate your warranty.
- ▲ Never charge your Antares phone when the phone or the connector at the base of the phone is damp or wet.
- The charger provided is for indoor use only, and should only be operated at temperatures between -20°C and 40°C.
- If your Antares phone has not been used for a significant period of time it may need to becharged for several minutes before the phone can be powered on.
- 1. Insert the smaller end of the USB Cable into the Micro USB port on the side of the phone.



- 2. Insert the larger end of the USB Cable into the charger body and plug the charger into an appropriate power sourceor or connect the larger end of the USB Cable into a USB port on a computer.
- When using a computer to charge your Antares phone, ensure that the computer is turned on and active rather than in sleep or standby mode, to avoid discharging the phone's battery rather than charging it.

- 3. When the phone is fully charged, disconnect it from the charger and disconnect the charger from the power source.
- When charging your Antares phone using the USB cable, ensure that you use a USB interface of version 2.0 or higher. Connection to "power USB" is prohibited.
- Do not remove the battery whilst the phone is being charged as it may damage your Antares phone.

Switching your Phone On and Off

Switch your phone on and off using the **[Power]** key on the left side of the phone.

To switch your phone on


Press and hold the **[Power]** key until the phone vibrates. The Tonino Lamborghini and Antares logos will be displayed during start up.

- Always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger. Remember to follow any special regulations in force in any area.
- To disable the wireless features press and hold the **[Power]** button then select Airplane mode.

To switch your phone off

- Press and hold the **[Power]** key. An Options menu appears.
 Touch Power off.
- 3. Touch OK to switch off your phone.

Antares Overview

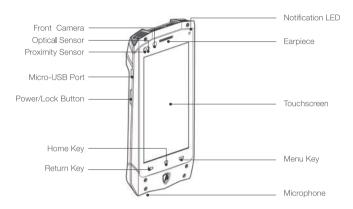



Keys

Key	Definition
Power/Lock	 To power your phone on press and hold until the phone vibrates Briefly press to lock/unlock your phone Press and hold for longer than 7 seconds to reset your phone should it freeze or hang-up For the Options Menu press and hold until the menu appears
E Function keys	Touch to open the Options Menu for the current screen
D Home	Touch to return to the Home screenTouch and hold to open the list of recently used Applications
⇔ Return	Touch to return to the previous screen
Volume	Press to adjust the volume of your phone

MAKING AND RECEIVING CALLS

It is not recommended, and may be illegal, to use your Antares phone while driving. If you need to make or answer a call, or use any of the phones other features, pull off the road and stop your vehicle in a safe place before using your phone.

Making a call

- 1. From the Home or Apps screen touch the Phone App Icon 📚
- 2. Use the keypad on the screen to enter the number you want to call.
- The number is shown at the top of the keypad.
- 3. If you enter a number incorrectly touch
 to delete a single digit or touch and hold
 to delete the whole number.
 4. Touch
 to place the call.
- For information on other ways of making a call, see the User Manual.

Answering calls

When an incoming call is received you hear a ringing tone and the phone vibrates (depending on your settings).

To answer the call, drag the central phone lcon to the Green phone lcon on the right. For details on handling multiple calls and changing your call waiting settings, see the User Guide.

Rejecting Calls

If you do not wish to take an incoming call, you can reject it. Depending on your settings the call may be diverted to your voicemail, or to another number. For details see the User Guide.

To reject an incoming call, drag the central phone lcon to the Red phone icon on the left.

Hands Free Calling

When you make or receive a call you can use the speakerphone feature to use your Antares phone hands free. When dialing or when in a call, touch the Speaker icon at the bottom of

the touchscreen.

The call now uses the speaker on your Antares phone.

MESSAGING

You can use the Messaging application to exchange text and multimedia messages with other messaging service users.

Messaging and multimedia messaging are network services. For information on enabling these services, contact your service provider.

Use of data services such as messaging, uploading and downloading, auto-syncing, or using location services may incur additional costs. To avoid unexpected charges, select an appropriate data tariff plan. For details, contact your service provider.

This section describes how to perform some of the basic tasks when working with messages. For details on composing multimedia messages and configuring message settings, see the User Guide.

Composing Messages

You can use your Antares phone to send text messages, or multimedia messages that contain text, pictures, recordings, audio files, videos or picture slideshows.

To compose a new text message

1. From the Home screen touch the Messaging icon 😡 then select

the New Message icon at the bottom left of the screen

 In the To field, enter the name of a contact from your Contacts list, or a mobile phone number. As you enter the name or number, matching contacts appear.

☐ If you enter an email address, the phone automatically converts the message to a multimedia message. For details see the User Guide.

- Continue to enter the name or number, or touch the name of the contact you want to send the message to.
- Touch the Type text message field to open the onscreen keyboard and enter your message.
- 5. Touch the Send icon \rightarrow to send the message.

To continue a message thread

- 1. From the Home screen touch the Messaging icon 🔯
- 2. Touch the thread you wish to continue.

The thread window opens showing the messages that have been exchanged.

- Touch the Type text message field to open the onscreen keyboard and enter your message.
- 4. Touch the Send icon \rightarrow to send the message.

For details of how to send Multimedia messages from a Text thread,

please refer to the User Guide.

Receiving Messages

When you receive a new message, a notification icon appears in the status bar.

To read a new message

1. Drag the notification bar down towards the bottom of the screen and

touch the message notification.

The message thread opens.

If you have already exchanged messages with the same person, previous messages are included in the thread.

To respond to a message

Touch the Type text message field to open the onscreen keyboard. Enter the text of your reply and touch the Send icon > To see other options, touch the Menu soft key at the bottom right of the screen.

Deleting Messages

You can delete a single message, delete an entire thread or delete all message threads.

To delete a single message

- 1. When the thread is open, touch and hold the message you want to delete. The Message options menu appears.
- 2. Touch Delete. A confirmation dialog appears.
- 3. To confirm deletion, touch Delete, or touch Cancel to keep the message.

To delete an entire thread

- 1. In the Messaging home page, touch and hold the thread you want to delete.
- 2. A message appears at the top of the screen confirming the number of threads selected.
- 3. Touch the Trash icon at the bottom left of the screen. The Delete options menu appears.
- 4. To confirm deletion, touch Delete, or touch Cancel to keep the thread.

WORKING WITH APPLICATIONS

Your Antares phone is supplied with a number of pre-installed features and applications. You can access the features and applications from the Home screen.

For details on the applications loaded onto your Antares phone, see the User Guide.

Safety Information

When using your Antares phone and accessories, the safety precautions below must be taken to avoid possible legal liabilities and damages. Retain and follow all safety and operating instructions, and observe all warnings in the User Guide. To reduce the risk of bodily injury, electric shock, fire and damage to the equipment, observe the following precautions.

This device is supplied with a Lithium ion (Li-ion) battery and a micro-USB to USB cable, which can be used with the charger provided and connected to an appropriate power source, or to the USB port in a computer or similar device using USB version 2.0 or higher.

- Ensure that you adhere to the following safety points. Failure to do so may result in permanent damage to the battery, phone or charger, and may cause injury or damage to people and property. For additional Safety Information please see the User Guide
- Only use an approved battery and charging device. Using an unapproved battery or unapproved charging device may cause damage to the battery, phone or charger, may cause injury to people or property and carries a risk of explosion.
- The charger supplied is for indoor use only.
- Do not attempt to remove the battery from the phone while it is charging.
- To reduce the risk of fire or burns do not attempt to open, disassemble or service the battery.
- Dispose of batteries carefully. Do not dispose of the battery in fire or water, but follow local regulations regarding disposal or recycling.
- Do not crush or puncture.
- Do not short external contacts.
- Do not expose the phone, battery or charger to temperatures above 50°C (122°F).
- Replace only with a battery designated for this product.
- Connecting your phone to equipment, such as a laptop or desktop computer that is inadequately grounded can result in an electric shock.
- When connecting your phone to an electrical device, always ensure that the device

is adequately grounded to earth before connecting your phone. See the device's user guide for details.

- Keep the battery and device dry and away from water or any liquid as it may cause a short circuit.
- Keep metal objects away from the battery and its external contacts, to avoid causing a short circuit.
- Do not use a battery that appears damaged, deformed or discoloured, or appears to have rust on its casing.
- Do not use a battery that overheats or emits an unpleasant smell.
- Keep the battery out of reach of babies and small children.
- If the battery leaks:
- Do not allow any leaking fluid to come into contact with skin or clothing. If contact occurs, flush the area immediately with clean water and seek medical advice.
- Do not allow leaking fluid to come into contact with eyes. If contact occurs, do not rub eyes but flush with clean water immediately and seek medical advice.
- Take extra care to avoid a leaking battery coming in contact with fire as there is a danger of ignition or explosion

Operating Environment

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that no part of the human body be allowed to come too close to the antenna during operation of the equipment.

Use only the supplied or approved parts. Unauthorised antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.

Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your phone.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm (6 inches) be maintained between a hand-held wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. If you have been fitted with a pacemaker:

- Always keep the phone more than 15 cm (6 inches) from your pacemaker when the phone is switched on.
- Do not carry the phone in a breast pocket.
- Use the ear opposite the pacemaker to minimise the potential for interference.
- If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Other Medical Devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so.

Hearing Aids

Some wireless phones may interfere with some hearing aids. In the event of such interference, consult your service provider.

Potentially Explosive Atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

You are advised to switch off the phone when at a refuelling point or service station. Observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include (but are not limited to) below deck on boats; chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

Aircraft

Switch off your phone before boarding an aircraft. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network and may be illegal. In the United States, FCC regulations currently prohibit using a telephone connected to a wireless network while in the air. Failure to observe these instructions may lead to suspension or denial of telephone services to the offender, or legal action, or both.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (e.g. electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems, air bag systems).

Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle. Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.

For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area

Traffic Safety

In some countries it is prohibited to use a handheld device such as a mobile phone

while driving, even with a hands-free accessory. Always ensure that you adhere to the relevant legislation.

Do not use a hand-held phone while driving a vehicle. If using a hand-held phone, park the vehicle safely before using the phone in any way.

Do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop.

Protect from Direct Sunlight

Do not leave your phone and its battery in places where the temperature may exceed 50°C (122°F), such as in a vehicle, on a window sill or behind glass that is exposed to direct sunlight or strong ultraviolet light for extended periods of time, as this may cause damage to the product, overheat the battery or pose a risk to the vehicle.

Disposal

(Discarded electronic and electric devices) (Applicable to EU or other European countries who has independent recycle system)

This sign seen on the product, its accessories or the technical data indicates that this product and its accessories (like the charger, headset, USB cable) shall not be disposed together with the other domestic wastes after they service time is over.

To avoid harm to the environment or to people's health inflicted by the improper control of wastes, please dispose these items separately from other wastes, and recycle them under responsibility, so as to maintain sustainable use of materials and resources.

Residential users shall contact the distributor of this product or the local authority to obtain the detailed information on how to dispose and recycle these items so as to protect the environment.

Commercial users shall contact the supplier and refer to the provisions in the contract. Do not mix this product with other commercial wastes for disposal.

Disposal of Battery



(Applicable to EU or other European countries who has independent recycle system)

This sign seen on the battery, User's Manual and the package indicates that the battery used in the product shall not be disposed together with other domestic wastes. The chemical symbols—Hg, Cd and Pb—indicate that their respective content exceeds the level specified in EC Directive 2006/66. Improper disposal of them may do harm to people's health or environment.

To protect the natural resources and promote the sustainable use of the materials, please dispose the battery separately from other wastes, and they can be recycled through the local free battery recycling program.

Limited Warranty

13

This limited warranty agreement is given by DBI Innovations Limited ("DBI Innovations") to the original purchaser ("Customer") of the DBI Innovations mobile phone Antares Product ("Product") and any accessories supplied with the device including the Accessories.

This Warranty does not exclude or limit any of the Customer's statutory rights or any of the Customer's rights against the seller or dealer of the Product.

- The Warranty for the Product shall last for the following warranty periods commencing on the date of original purchase of the Product ("Warranty Period"):
- a. two (2) years for the Product, excluding the parts and components referred to in clause 2.b;
- b. one (1) year for the battery, charger, cables and cases.("Accessories")
- 2. Any claim under this Limited Warranty is subject to the Customer notifying DBI Innovations or an authorised service agent of the alleged defect within thirty (30) days of the defect coming to the Customer's attention, and in any event no later than before the expiry of the relevant Warranty Period.
- 3. This Limited Warranty is only valid and enforceable in the country where the product is purchased, and provided DBI Innovations intended for the Product to be sold in that country. If the Product was purchased in the European Union, then this warranty will apply in all countries in the European Union.
- 5. During the Warranty Period, DBI Innovations will repair, modify or replace, at DBI Innovations' sole option, any defective parts with new or refurbished replacement parts if such repair, modification or replacement is required due to product malfunction or failure during normal usage. Any parts that have been replaced will become the property of DBI Innovations. No charge will be made to the Customer for such repair, modification or replacement, or for the labour charges incurred in repairing, modifying or replacing the defective parts.
- The Warranty Period for the repaired Product or Accessory shall be until the end of the original Warranty Period or for ninety (90) days from the date of repair, whichever is longer.

- 7. This Limited Warranty does not cover physical damage to the surface of the Product or Accessory, including, but not limited to, scratches or wear and tear on the camera lens, touchscreen or polished surfaces of the Product.
- 8. Before returning the Product for repair, the Customer shall be responsible for backing up any data stored on the Product. DBI Innovations may have to erase all applications and Data and DBI Innovations shall not be responsible for damage to or loss of any programs, applications or data stored on the Product when it has beensent for repair.
- 9. On DBI Innovations' request the Customer shall provide proof of the date of original purchase or delivery of the Product or Accessory. Such proof may be in the form of a legible, unmodified and dated Certificate of Ownership, or an invoice or a receipt from an authorised retailer showing the date of purchase or delivery, the Product's IMEI and/or Limited Edition number and the name and address of the authorised retailer that sold the Product to the Customer.
- 10. DBI Innovations shall bear the cost of returning the Product after completion of repair under this Limited Warranty to the location from which the Customer handed over the product to DBI Innovations.
- 11. This Limited Warranty shall not apply if:
- a. the defect or damage was caused, or the repair or replacement is required, as a result of usage other than as described in the user documentation, rough handling, abnormal use or conditions, exposure to moisture, dampness, extremes of temperature, a rapid change in temperature, chemical agents, or spillage of food or liquid, improper storage, unauthorised modification or repair,
- b. connection to unauthorised devices, misuse, accident, alteration or any other actions beyond the reasonable control of DBI Innovations, including without limitation damage caused by shipping, dropping the Product, or deterioration of
- c. consumable parts such as batteries which by their nature have a limited lifespan. the defect was caused as a result of installation of third party software products, applications or games, including, but not limited to, internet or computer viruses, Trojan horses, worms, bugs, spiders, bots or other malicious software. the product was damaged by short-circuiting or leakage of the battery, or if the

seals of the battery enclosure were damaged or tampered with, or if the battery has been used in devices other than that for which it has been specified.

- d. the Product was damaged by external causes such as dropping the phone, or collision with an object, or fire, flooding, earthquake, lightning, wind storm, exposure to adverse thermal, environmental or weather conditions or an Act of God.
- e. the defect was caused by the Product being used with or connected to an accessory not approved or provided by DBI Innovations or being used in other than its intended use and where it can be shown by DBI Innovations that such defect is not the fault of the Product itself.
- f. the defect was caused by the SIM card or by a defective cellular network or other wireless system, including but not limited to femtocells, picocells or Wi-Fi networks, or by a change in any of the aforesaid since the date of purchase of the Product.
- g. the bootloader was unlocked by the Customer or his/her agent (allowing third-party operating system installation) using the fastboot program.
- h. the Product software needs to be updated because of a change to the cellular network parameters.
- i. the Product's Limited Edition badge, IMEI label or the accessory data code has been removed, defaced, altered or is illegible.
- the Customer did not return the Product to the Customer Service Department (see www.lamborghinimobile.com) or an authorised retailer within thirty (30) days of the appearance of the defect.
- k. The defect or damage was caused by unauthorised repair being carried out.
- The defect or damage was caused by failure to follow the instructions for care of the product, or by failure to follow safety instructions.
- m. the defect or damage was as a result of general wear and tear incurred in normal usage of the Product

12. In the event that a problem arises within the Warranty Period, the Customer should take the following actions:

Safety Information

Contact the DBI Innovations Customer Service Department

(See www.lamborghinimobile.com for details on how to do this.)

Return the Product or Accessory to the place of purchase, or to the Service Centre if so advised by the Customer Service Department.

DBI Innovations will repair or authorise the repair of the Product or Accessory under this Limited Warranty within thirty (30) days of receipt of the Product or Accessory by DBI Innovations or its authorised service centre, or within an extended period of time as notified to the Customer if the repair requires a longer time period ("Timeframe"). If DBI Innovations cannot repair the product within the Timeframe, or if the same repair is repeatedly required, DBI Innovations may, at its sole option, provide a replacement Product or Accessory or refund the purchase price minus a reasonable sum for usage.

- 13. If the Product or Accessory is returned during the Warranty Period but it is found that the defect is not covered under the terms of this Limited Warranty, the Customer will be advised of the estimated cost of the repair and shipping charges and may elect to either pay for the repair and shipping or have the Product or Accessory returned freight collect.
- 14. If the Product or Accessory is returned to the Customer Service Department outside the Warranty Period, DBI Innovations' normal service policies shall apply and the Customer will be responsible for all costs of repair and replacement and for all shipping charges.
- 15. If the Product or Accessory is returned to the Customer Service Department outside the Warranty Period, DBI Innovations' normal service policies shall apply and the Customer will be responsible for all costs of repair and replacement and for all shipping charges.
- 16. THIS LIMITED WARRANTY STATES THE ENTIRE WARRANTY GIVEN BY DBI INNOVATIONS TO THE CUSTOMER. ALL IMPLIED WARRANTIES OF SATISFACTORY QUALITY OR FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE RELEVANT WARRANTY PERIOD. IN NO EVENT SHALL DBI INNOVATIONS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL LOSSES OR

Safety Information

DAMAGES OF ANY NATURE WHATSOEVER (WHETHER SUCH LOSSES OR DAMAGE WERE NOTIFIED TO DBI INNOVATIONS, FORESEEN, FORESEEABLE, KNOWN OR OTHERWISE), TO THE FULLEST EXTENT THAT THOSE LOSSES OR DAMAGES CAN BE DISCLAIMED BY LAW, INCLUDING BUT NOT LIMITED TO:

- a. PUNITIVE, SPECIAL OR CONSEQUENTIAL DAMAGES.
- b. THIRD PARTY CLAIMS.
- c. LOSS OF ANTICIPATED BENEFITS OR PROFITS.
- d. LOSS OF ACTUAL OR ANTICIPATED SAVINGS.
- e. LOSS OF REPUTATION.
- f. LOSS OF GOODWILL
- g. LOSS OF OPPORTUNITY.
- h. LOSS OF BUSINESS.
- i. LOSS OF, CORRUPTION OF OR DAMAGE TO DATA.
- j. LOSS OF USE OF THE PRODUCT OR ACCESSORY OR ANY ASSOCIATED FACILITIES OR EQUIPMENT.
- 17. To the extent permitted by applicable law, DBI Innovations maximum liability under this warranty shall be the price paid for the Product or Accessory, less a reasonable sum for usage. This limitation does not apply in the case of gross negligence, fraud, or death or personal injury arising from DBI Innovations negligence.
- 18. In the event that any term of, or any part of any term of, or any right arising from, this Limited Warranty shall be invalid or unenforceable, the validity or enforceability of all other terms or rights or the remainder of any such term or right shall continue in full force and effect except for the invalid provision or the extent of unenforceability of the provision.
- 19. The Product has not been designed, and is not sold, as a device whose sole or primary purpose is the making of receiving of emergency calls or data. As such, the Product should not be relied upon for making or receiving calls or data relating to emergency or life-threatening or critical situations.
- 20. DBI Innovations operates a policy of continuous development and reserves the

right to make changes and improvements to any of the Products or Accessories without prior notice. All information relating to the warranty, product specifications and features are subject to change without notice. See the DBI Innovations website, www.lamborghinimobile.com, for the latest product and warranty information.

 Any questions relating to this Limited Warranty may be directed to the Customer Service Department. See the DBI Innovations website, www.lamborghinimobile.com for information on how to contact the Customer Service Department.

Safety Information